



Earn BISSELL Rewards!

Register your
product today!

See details on
back page

POWERsteamer®

USER'S GUIDE

1697, 8804 SERIES

- 2 Thank You
- 3 Safety Instructions
- 4-5 Product View
- 6 Assembly
- 7-8 Special Features
- 8-13 Operations
- 14-15 Maintenance & Care
- 16-17 Troubleshooting
- 18 Replacement Parts
- 19 Warranty
- 20 Product Registration
- 20 Consumer Care



 
Thanks for buying a BISSELL Deep Cleaner

We're glad you purchased a BISSELL deep cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL deep cleaner is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your deep cleaner.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR DEEP CLEANER.

WARNING: **To reduce the risk of fire, electric shock, or injury:**

- Do not immerse.
- Use only on surfaces moistened by the cleaning process.
- Always connect to a properly grounded outlet.
- See Grounding Instructions.
- Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- Do not leave machine when it is plugged in.
- Do not service machine when it is plugged in.
- Do not use with damaged cord or plug.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized Service Center.
- Use indoors only.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces.
- Unplug by grasping the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot or burning objects.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, gasoline, etc.).
- Do not modify the 3-prong grounded plug.
- Do not allow to be used as a toy.
- Do not use for any purpose other than described in this User's Guide.
- Do not unplug by pulling on the cord.
- Use only manufacturer's recommended attachments.
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage. See the cleaning fluid section of this guide.
- Keep openings free of dust, lint, hair, etc.
- Do not point attachment nozzle at people or animals
- Keep appliance on a level surface.
- Turn off all controls before unplugging.
- Unplug before attaching the TurboBrush®.
- Be extra careful when cleaning stairs.


- Close attention is necessary when used by or near children.
- Always install float before any wet pick up operation.
- Do not operate the appliance unless the belt door is securely assembled in the location provided.

SAVE THESE INSTRUCTIONS.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

GROUNDING INSTRUCTIONS


This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

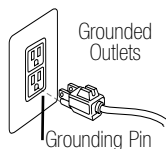

WARNING:


Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the drawing above. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

Product view

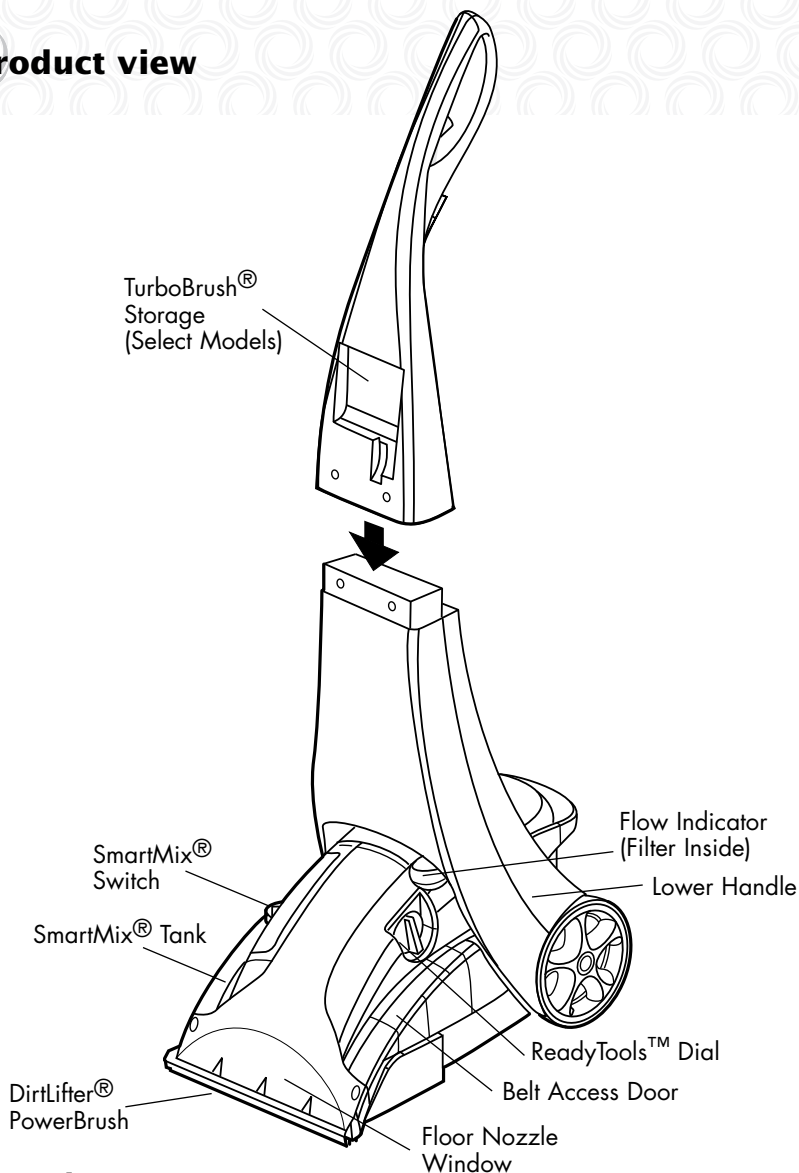


Optional Accessories

 
These items are available for purchase with your model. To order replacement parts or additional tools or formulas, please refer to page 19.



3" Tough Stain Tool

 


4" Upholstery Tool

 

TurboBrush®



 Hard Floor Tool




Spraying
Crevice Tool



Mesh Tool Bag
(bag only)

Product view

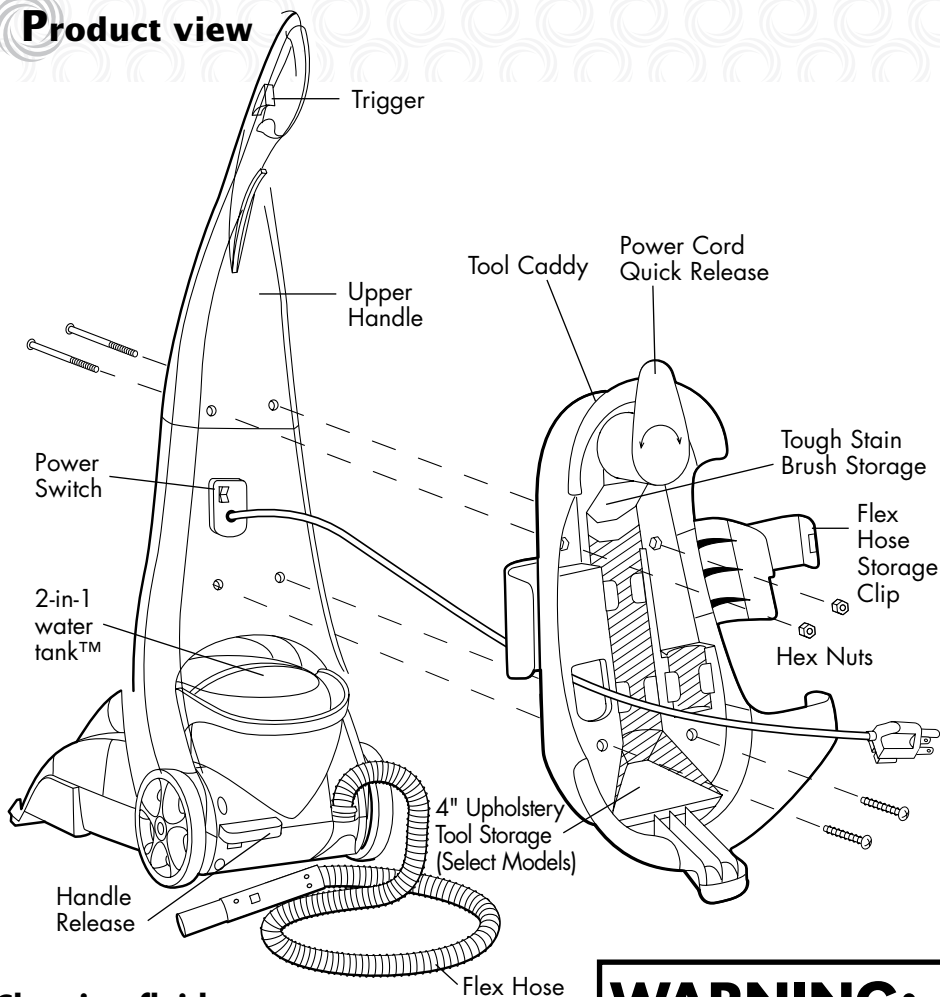

Cleaning fluid

Keep plenty of genuine BISSELL 2X formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and will void the warranty.

WARNING:

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.



BISSELL
Deep Clean
and Protect
Formula with
Scotchgard™
Protector



BISSELL Pet
Stain & Odor
Removal
Formula with
Scotchgard™
Protector



BISSELL
Professional
Deep Cleaning
Formula with
Scotchgard™
Protector



BISSELL
Spring Breeze
Formula with
Scotchgard™
Protector



BISSELL
Hard Floor
Solutions™
Formula




BISSELL
Tough Stain
PreCleaner™

Assembly

Your PowerSteamer comes in three, easy to assemble components:

Upper Handle Lower Handle Tool Caddy

The only thing you will need to assemble your cleaner is a Phillips head  screwdriver.


1. Slide upper handle onto lower handle.
2. Feed bundled power cord through tool caddy from caddy's flat side.
3. Align upper handle holes and tool caddy holes.
4. Place hex nut into back of tool caddy and hold in place. Insert bolt from front to back turning into the hex nut until snug. Do not over tighten. Repeat for the second bolt and hex nut.
5. Insert 2 screws into lower 2 holes. Turn until snug.
6. Snap tools into storage on the tool caddy.
7. Wrap power cord and flex hose as shown in figure 7.

PowerSteamer assembly is now complete.



WARNING:

Do not plug in your cleaner until you have completely assembled it per the following instructions and are familiar with all instructions and operating procedures.

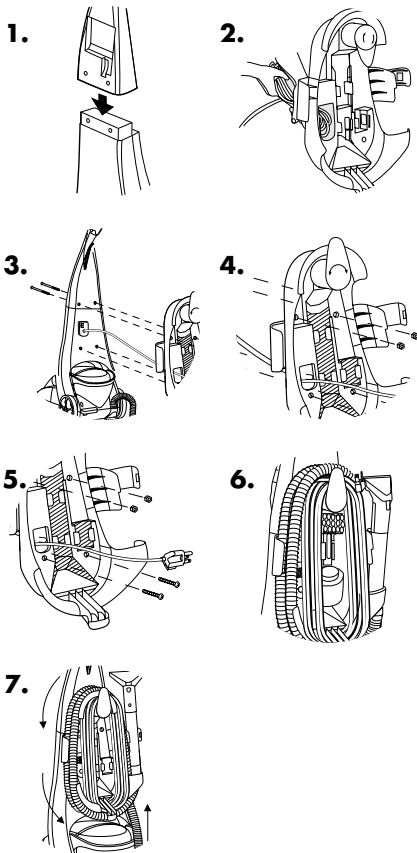

Special Features

Your BISSELL PowerSteamer is a home cleaning system that uses a combination of hot tap water, BISSELL advanced cleaning formula and suction to safely clean carpets and upholstery.

DirtLifter® PowerBrush

The DirtLifter PowerBrush is designed to enhance cleaning performance. The bristle pattern safely lifts out the deep down dirt while gently grooming carpet fibers. The floating suspension self-adjusts to all carpet heights. When the power is **ON (I)** and the machine is in the upright position, your carpet is protected because the brushes are lifted up off the carpet.

SmartMix®



The SmartMix feature automatically mixes hot tap water with the BISSELL advanced cleaning formula. Simply choose one of the 3 settings (high traffic, normal, or water only) and the PowerSteamer will adjust the right amount of cleaning solution to mix with the water to fit your cleaning need.

When your cleaning job is finished, the formula can be stored ready to use in your machine for the next time!

2-in-1 water tank

Our 2-in-1 water tank system is designed with a heavy duty bladder inside for clean water. As you clean, the clean water in the bladder will empty and mix with the cleaning formula. Dirty water pulled out of your carpets will collect around the outside of the bladder so that clean and dirty water are always kept separate. This allows the user to maximize tank space, yet only carry one tank to and from the sink for emptying and filling.

SmartMix bottle

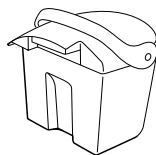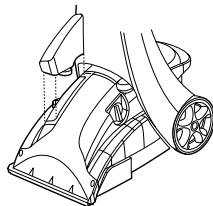

Special Features


Flow indicator

This is located on the machine base. It spins when the trigger is pressed to indicate that the machine is applying cleaning solution to the carpet and will stop spinning when the SmartMix tank or Bladder needs to be refilled, or when the trigger is released.

Note: Flow indicator does not spin when spraying through the attachment hose.

ReadyTools dial

This provides either floor cleaning or above the floor cleaning with the flip of a switch. If choosing above floor cleaning for upholstery, stairs, or along the baseboards, choose the attachment appropriate for the job. Attach tool to the hose, and you are ready to go!

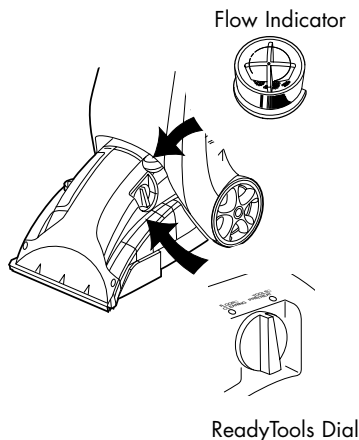


Operations

1. Plan activities to give your carpet time to dry.
2. Move furniture to another area if cleaning an entire room (optional).
3. Thoroughly vacuum area with a dry vacuum cleaner before deep cleaning.
4. Plan your cleaning route to leave an exit path. It is best to begin cleaning in the corner farthest from your exit.
5. Pretreating (optional)

NOTE: Pretreating is recommended to improve cleaning effectiveness for heavily soiled carpet in high traffic areas such as entryways and hallways.

- a. Spray the BISSELL Tough Stain Pre-treat formula onto heavy traffic areas, soiled areas, or stains.
- b. Allow to penetrate for at least 3 minutes.
- c. Following the instructions below, clean as normal, using the BISSELL PowerSteamer machine on the high traffic setting.

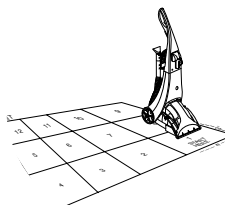

ATTENTION:

Some Berber carpets have a tendency to fuzz with wear. Repeated strokes in the same area with an ordinary vacuum or deep cleaner may aggravate this condition. Please see Stain Removal instructions on page 12.



Operations

Fill the 2-in-1 water tank

1. Release the handle and lay the machine handle back to access the Tank.
 2. Remove the tank from the base of the machine by lifting the tank carry handle.
 3. Carry like a bucket to the sink. Rotate the handle forward to unlatch the lid. Lift off and set the lid aside.
 4. Fill up the bladder with clean hot tap water. ***Do not boil or microwave water as it can destroy the bladder.**
 5. Replace the top of the tank by matching the lid and tank edges. Handle must be in the forward position in order to replace lid. Rotate the handle to the carrying position to latch the lid.
- NOTE: Remember to secure the lid and test to make sure it is secure before picking up the tank.**
6. Place tank into machine base, seating firmly in place. Rotate tank handle back into latched position. Bring machine handle back into upright position.









Fill the SmartMix/formula tank

1. Lift the formula tank up and out of the machine base.
2. Fill the formula tank by first unscrewing the cap and insert. Always use genuine BISSELL formulas to maximize cleaning and for the safety of your machine. Fill with water to the water fill line, then fill with formula to the formula fill line and replace the cap and insert. Place formula tank into the slot in the back of the machine for a snug fit.

NOTE: If bottle leaks, check for proper positioning of red gasket and straw insert.

WARNING:

To Reduce the Risk of Fire and Electric Shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.

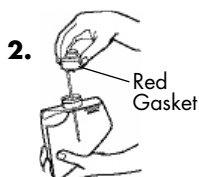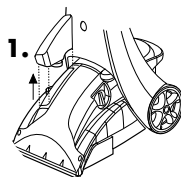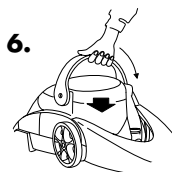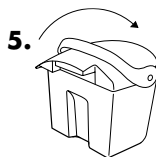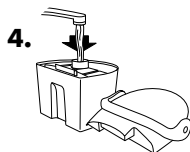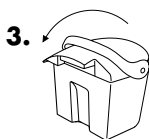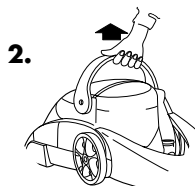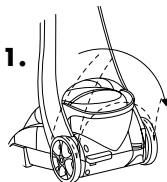

Operations

Choose the SmartMix setting

Simply choose one of the 3 settings

- **High Traffic**
- **Normal**
- **Water Rinse**

and the PowerSteamer will adjust the right amount of cleaning solution to mix with the heated water to fit your cleaning need.

NOTE: When your cleaning job is finished, the formula can be stored ready to use in your machine for the next time!

Set ReadyTools dial

Set ready tools dial to the floor cleaning setting.

Power switch

1. Plug into a proper outlet and turn the power switch to the **ON (I)** position. The switch is found on the back of the handle.

Cleaning strokes


1. While pressing the trigger, make one slow forward wet pass and another one back. Let the formula and DirtLifter PowerBrush do the work for you. Caution: Do not overwet. Take care not to run over loose objects or edges of area rugs. Stalling brush may result in premature belt failure.
2. Release the trigger and make one slow forward and backward pass over the same area to remove any residual dirty water, and aid in drying. Repeat cleaning passes until solution being pulled up appears clean. Continue passes without pressing the trigger until you can't see any more water being pulled up.

NOTE: Both the SmartMix tank and the clean water tank must have liquid in them in order for the machine to spray. If one tank is empty the machine will not apply cleaning solution or water.

3. After cleaning, you may want to turn the SmartMix dial to rinse to give your carpeting a final water only rinse. This will ensure thorough removal of embedded dirt loosened by the deep cleaning formula.

WARNING:

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.

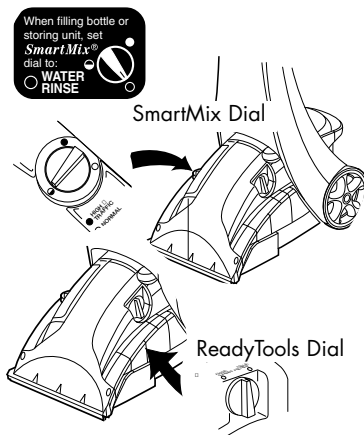

Tip:

Deep cleaning stairs and high traffic areas on a regular basis can prolong carpet life.

Operations

Empty The 2-in-1 water tank

1. Remove the 2-in-1 water tank from the base using the tank carry handle. Carry the tank like a bucket to a utility sink or outside where you will dispose of the collection water. Remove the top of the tank by rotating the handle forward to unlatch lid and lifting lid off tank.

2. Empty collection water from bottom of tank.

NOTE: You may notice hair & debris deposits on the carpet or in the tank that were loosened by the cleaning action (especially with newer carpets that have never been deep cleaned before). This debris should be picked up and thrown away.

3. After each use, remove and rinse the lint screen located on the tank lid.
4. Refill the tank in tank by referencing "Fill the 2-in-1 water tank" on page 9. Remember to secure the top of the tank by rotating the handle and test to make sure it is secure before picking up.
5. Return 2-in-1 water tank to the machine.






Rinse (optional)

Rinsing is an optional step that can be done during the cleaning process by switching to the water rinse setting, or it can be done after the carpeted area has been cleaned.

1. Simply choose the water rinse setting on the SmartMix dial, and follow the same path as you did for cleaning, taking care to do a forward (wet) stroke by depressing the trigger, a backward (wet) stroke, and a forward and backward (dry) stroke, releasing the trigger. Continue this until the water you see coming up the nozzle is clear, taking care not to over-wet the carpet.

WARNING:

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.

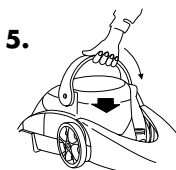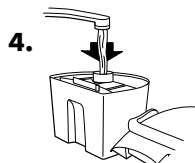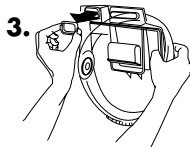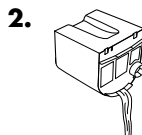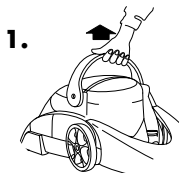

1.

When filling bottle or storing unit, set **SmartMix®** dial to:
WATER RINSE

Operations

Stain removal

Do not delay! Attending to an accident soon after it occurs ensures the chances for full removal. Leaving it for an extended period of time may cause it to set and become permanent.

1. Blot up liquids with an absorbent cloth or paper towels. White materials are recommended because certain dyes may bleed and make the stain worse.
2. Gently scrape up any semi-solids with a spoon or spatula. Do not use a knife or other utensil with sharp edges because it could damage the carpet or upholstery.
3. If the area has dried, remove the remaining semi-solids and residue with a sweeper or vacuum.
4. Be sure to test any spot removal formulas in an inconspicuous area first. This is important as some dyes and materials could be damaged or discolored by cleaning solvents. If such a change should occur, try a different solution or call a professional.
5. If cleaning on Berber carpeting, gently run your machine over a hidden area. If no fuzzing occurs, continue cleaning in soiled area.
6. Using the BISSELL Tough Stain PreCleaner, spray evenly over soiled area. Do not overwet. Wait 3-5 minutes. Gently work the solution by blotting area with a clean, damp, color safe cloth.
7. Clean using either the floor cleaning, or tools or pretreat setting on the ready tools dial.

WARNING:

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner. Non-BISSELL cleaning solutions may harm the machine and void the warranty.



Operations


Hard floor cleaning

Your PowerSteamer model may have come with a hard floor attachment and Hard Floor Solutions Formula. If not, these products are available for purchase by contacting the BISSELL Consumer Care department by phone or on the website. The hard floor tool provides effective cleaning for linoleum, vinyl, and tile floors. Caution: Do not use on unsealed hardwood floors.

1. Vacuum or Sweep thoroughly to pick up any loose debris and pet hair.
2. Move any furniture, if needed.
3. Empty any carpet cleaning formula back into the BISSELL bottle if stored in the formula tank. Fill formula tank with water to the water fill line, then with BISSELL 2X Hard Floor Solutions to the formula fill line (available at many retailers, or contact BISSELL Consumer Care).
4. Fill the 2-in-1 water tank with hot tap water and set aside.
5. Attach the hard floor tool onto the floor nozzle with the long tab to the right side of the floor nozzle. First attach left side (short tab) catching tab over nozzle edge. Gently bend long tab (right side) outward to easily snap over edge of clear nozzle on left.
6. Set the ready tools dial to floor cleaning.
7. Set the SmartMix dial to normal clean.
8. Plug into an outlet and turn the power switch **ON (I)**.
9. Slowly move the machine forward and back over bare floor surface one time while pressing trigger.
Caution: Do not overwet.
10. Repeat the motion without pressing the trigger. This allows the hard floor tool to squeegee and suction up the dirty water.
11. Allow approximately 30 minutes for floors to dry.
12. Remove hard floor tool and rinse and dry before storing.
13. If any formula remains in the formula tank, pour it back into the formula bottle for use the next time.
14. Rinse out the formula tank.

WARNING:

To reduce the risk of electric shock when cleaning a hard floor, the BISSELL Hard Floor Tool (203-5640) must be used and it must only be used with BISSELL 2X Hard Floor Solutions cleaning fluid intended for use in this appliance

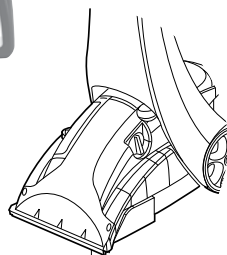


Bottom Front Edge
of Floor Nozzle

Hard Floor
Cleaning Tool

Snap Together

5.

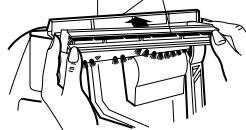

Maintenance and Care

Machine storage

Once your cleaning is complete, make sure the 2-in-1 water tank is emptied and rinsed out. Put the unit away in a closet or basement for the next use. The SmartMix tank can remain filled and ready to go (store with machine set to water only setting).

Note: Store cleaner in a protected, dry area. Since this product uses water, it must not be stored where there is a danger of freezing. Freezing will damage internal components and void the warranty.

Machine Care


For best results, a few simple steps can assure your machine is well maintained after your cleaning is complete.

1. Turn power switch **OFF (O)**. Unplug the machine and wrap the power cord.
2. After emptying the 2-in-1 water tank, rinse it out at a faucet with running hot tap water, taking care to clean underneath the heavy duty bladder, and all around it. Clean out lint trap.
3. Replace the 2-in-1 water tank on the machine.
4. Clean out the flow indicator filter each time it is used to ensure best cleaning performance. Unscrew the flow indicator cap, lift out the red rotor and white filter. Rinse all three parts with water. Replace the filter and rotor. Replace the flow indicator cap. Turn until snug, do not over-tighten.
5. Any loose hair or debris can be pulled from the brush roll if desired and thrown away.
6. Wipe the machine's exterior with a soft cloth.
7. After carpet is dry, vacuum again to remove hair and fuzz.



WARNING:


To reduce the risk of fire, electric shock or injury, unplug from the outlet before servicing.

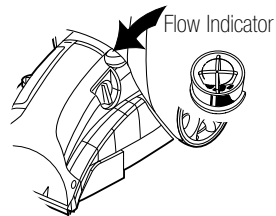

Maintenance and Care

Your PowerSteamer machine comes equipped with a hose and at least one attachment for cleaning stairs, upholstery, and more.

1. Important! If using to clean Upholstery, check Upholstery Tags.
 - a. Check manufacturer's tag before cleaning. "W" or "WS" on the tag means you can use your PowerSteamer. If the tag is coded with an "X" or an "S" (with a diagonal stripe through it), or says "Dry Clean Only", do not proceed with any deep cleaning machine. Do not use on velvet or silk. If manufacturer's tag is missing or not coded, check with your furniture dealer.
 - b. Check for colorfastness in an inconspicuous place.
 - c. If possible, check upholstery stuffing. Colored stuffing may bleed through fabric when wet.
 - d. Plan activities to allow upholstery time to dry.
 - e. Vacuum thoroughly to pick up loose debris and pet hair. Use a vacuum with a brush attachment and a crevice tool to clean in fabric folds.
2. Follow the instructions on page 9 for filling the 2-in-1 water tank and the formula tank.
3. Set ready tools dial to the tools or pretreat setting. This will allow spray and divert the suction to the hose.
4. Set SmartMix dial to normal.
5. Attach the cleaning tool to the end of the hose.
6. Plug in and turn on the power switch.
7. Clean by pressing the trigger to spray solution onto the area to be cleaned. Slowly move the tool back and forth over the soiled surface. Release the trigger to suction soiled water. Continue to clean in the area, working in small sections, until no more dirt can be removed. Rinse (optional) and suction as needed. Caution: Do no overwet.
8. When cleaning is complete, remove and rinse tools in clean, running water.
9. Coil hose around the tool caddy.
10. Empty 2-in-1 water tank and rinse out, following the instructions on page 11.
11. Return ready tools dial to floor cleaning.

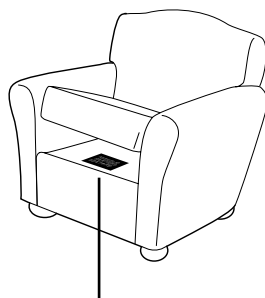

Manufacturer's tag



 
WARNING:

To reduce the risk of injury, be extra careful when cleaning stairs. Make sure machine is secure and level.

Tip:

Deep cleaning carpeting and upholstery with BISSELL Multi-Allergen Removal Formula™ with Scotchgard™ protector regularly can reduce dust and allergens in your home.

5.




Troubleshooting

Reduced spray or no spray.

Possible Cause

1. Bladder may be empty.
2. SmartMix tank may be empty.
3. The filter may be clogged.
4. Tanks may not be seated properly.
5. Pump may have lost prime.
6. The pump belt may be broken.

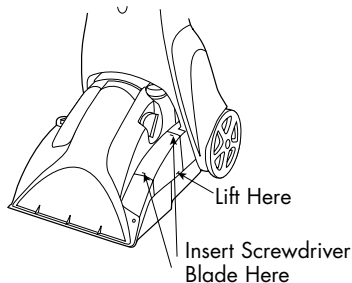

DirtLifter PowerBrush does not turn.

Possible Cause

1. The Brush Belt or Pump Belt is off or broken.

WARNING:

To reduce the risk of fire, electric shock or injury unplug from outlet before servicing.

Remedies

1. Refill bladder with hot tap water.
2. Follow the instructions under "Fill the SmartMix/formula tank" on page 9 Formula for cleaning.
3. Clean out flow indicator filter, page 14, step 4.
4. Turn power OFF (0); remove & reseal tanks.
5. Turn power OFF (0); after 1 minute turn ON and press Trigger.
6. Turn the machine OFF (0) and unplug from the outlet. To check if a pump belt has broken, you will need a flat head screwdriver. Insert the blade end into the lower slot of the belt access door to release the lower snap. If necessary, insert the blade end into the upper slot to release the upper snap. Examine the belt for breakage. You should be able to see the pump belt looped around the motor shaft. If it is broken or missing, please refer to Replacement Parts on page 18 before calling Consumer Care. Complete installation instructions will accompany the replacement belt.

Remedies

1. Turn the machine OFF (0) and unplug from the outlet. To check if the brush belt or pump belt has broken, you will need a flat head screwdriver. Insert the blade end into the lower slot of the belt access door to release the lower snap. If necessary, insert the blade end into the upper slot to release the upper snap. Examine the belt for breakage. If broken, please refer to Replacement Parts on page 18 before calling Consumer Care. Complete installation instructions will accompany the replacement belt.

Troubleshooting

Cleaner not picking up solution.

Possible Cause

1. Ready tools dial may be on the wrong setting for the cleaning job.
2. Nozzle window may not be properly attached.
3. 2-in-1 water tank lid is not properly installed.
4. 2-in-1 water tank is not properly seated.
5. Poor tool position. (Hand held attachments only).
6. 2-in-1 water tank has picked up maximum dirty water.

Remedies

1. Set ready tools dial to either or tools or pretreat floor cleaning.
2. Press down firmly on the black oval gasket at the top window to make sure the two tabs on the back of the nozzle window are snapped into the corresponding holes in the main housing.
3. Re-install lid; refer to page 9.
4. 2-in-1 water tank must be firmly seated to function; remove and reseal 2-in-1 water tank.
5. Adjust angle; apply more downward pressure.
6. Empty 2-in-1 water tank, refer to page 11.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.


Please do not return this product to the store.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Replacement parts - BISSELL PowerSteamer

Below a list of common replacement parts. While not all of these parts may have come with your specific machine, all are available to you for purchase, if desired.

Item	Part No.	Part Name
1	015-9043	Tank Assembly Complete (Includes lid assembly)
2	015-4439	Tank Lid Assembly
3	015-9041	Tank Bottom
4	210-1785	SmartMix® Tank (Includes Cap)
5	210-1795	SmartMix® Cap Assembly
6	555-6503	Flow Indicator Cap Assembly
7	214-9871	Floor Nozzle Window and Gasket
8	210-4052	Window Gasket
9	215-0628	Replacement Pump Belt (With Instructions)
10	015-0621	Replacement Belt Brush (With Instructions)
11	213-3501	Lint Screen

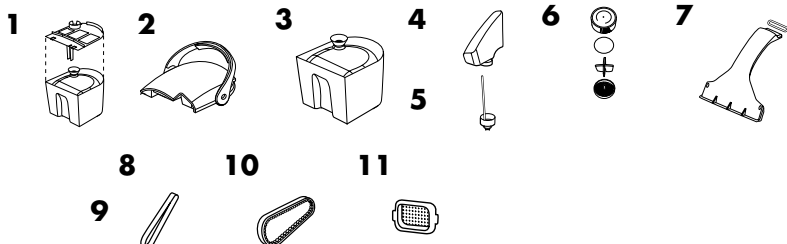

Accessories - BISSELL PowerSteamer

Item	Part No.	Part Name
1	203-6653	4" Upholstery Tool
2	203-6652	Spraying Crevice Tool
3	203-6652	TurboBrush® Tool
4	203-5640	Hard Floor Tool
5	203-6651	3" Tough Stain Tool
6	62E5-2	BISSELL 2X Deep Clean & Protect Formula 60 oz
7	99K5-2	BISSELL 2X Professional Deep Cleaning Formula 60 oz
8	84U4-2	BISSELL 2X Professional Deep Cleaning Formula 60 oz
9	56L9	BISSELL 2X Hard Floor Solutions™ 16 oz
10	4001	Tough Stain PreCleaner™ 22 oz



Warranty - BISSELL PowerSteamer

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited One Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the user's guide is not covered.

If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website or E-mail:

www.bissell.com

Or Call:

BISSELL Consumer Care

1-800-237-7691

Monday - Friday 8 am - 10 pm ET

Saturday 9 am - 8 pm ET

Or Write:

BISSELL Homecare, Inc.

PO Box 3606

Grand Rapids, MI 49501

ATTN: Consumer Care

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.



Don't forget to register your product!

Registering is quick, easy and offers you benefits over the lifetime of your product. You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.bissell.com/registration now!



BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty, call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday 8 am — 10 pm ET

Saturday 9 am — 8 pm ET

Or write:

BISSELL Homecare, Inc.

PO Box 3606

Grand Rapids MI 49501

ATTN: Consumer Care

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 19 for details.



©2012 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4504
Rev 4/12
Visit our website at:
www.bissell.com
Scotchgard is a trademark of 3M
800.237.7691

